

# Affinity™ Soap Dispenser Installation Instructions

## 1a Key Lock Option

For use with included 2-prong plastic key.




1. Insert key into key access holes underneath dispenser.
2. Lift front cover.

## 1b Push Button Option




This option is permanent and cannot be undone.

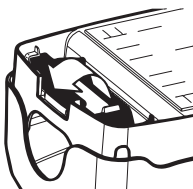


1. Rotate and snap button into position on the rear of the dispenser.
2. Push button and lift front cover.

## 2a Fastener Installation


This dispenser has been designed with a universal back plate to take advantage of existing hardware. Before drilling, check to see if existing hardware can be utilized.

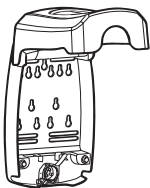

1. Open dispenser.

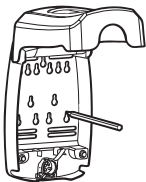

2. Using backplate as a guide, mark the location for 4 mounting anchors.

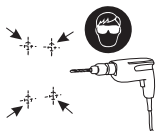

3. Drill holes using a 7/32" (5.5mm) bit.



4. Insert anchors into holes. Screw fasteners halfway into anchors.




5. Mount dispenser onto fasteners.
6. Tighten fasteners. Do NOT over tighten.

## 2b Tape Installation


Should only be used for smooth surfaces.



1. Clean installation surface with included prep pad. Let surface dry for 60 seconds.

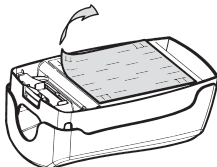

2. Peel backing paper from installation tape, open cover.

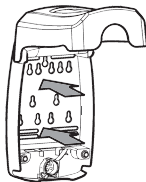

3. Position dispenser, press firmly on **INSIDE** (not just sides) of backplate for 30 seconds.




4. For maximum adhesion, do not load refill cartridge for 24 hours.

## 3 Refill Cartridge Installation and Removal

### INSTALLATION

Place cartridge into dispenser and gently push pump into receiver until it clicks into place.

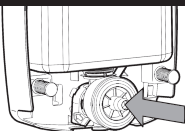

### REMOVAL

To remove the cartridge and pump, rotate the green ring clockwise and pull the pump out.

