

## REFILL DISPENSER



Use Key  
to Open  
Refill  
Slot Lid



Slide Refill  
Into Slot  
  
Screw  
On Cap  
Finger Tight



Push to  
Close  
Refill  
Slot Lid

## SELECT PRODUCT



Use BLUE  
Dial to  
Select  
Product



**ALWAYS  
FOLLOW  
SDS & LABEL  
FOR SAFETY  
AND USE  
PRECAUTIONS**


## BOTTLE FILL



Slide  
Bottle  
Up Short  
Refill Tube



Press  
Gray  
Button to  
Fill

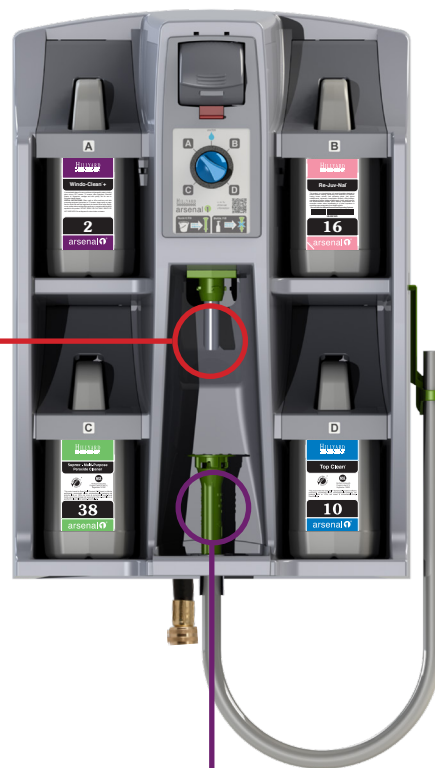

## BUCKET & SCRUBBER FILL



Attach  
Bucket  
Fill Hose to  
Dispenser



Position  
Hose in  
Scrubber  
/Bucket



Press Gray  
Button to Fill  
  
Lock in  
Fill Button  
w/ Red Tab